1) Power ON/OFF
2) Codec info, while playing full screen movie.
3) Pause / Play, while in full screen movie.
4) Right / Left or Skip forward / Skip Back 10 secs in full screen movie. Press multiple times to skip faster.
5) Menu / Context. Press to get up a menu to add to Library or add to Favourites.
6) Page UP / DOWN
7) Home. Takes you to the main start screen.
8) UP / DOWN or Skip forward / Skip back 10 minutes, while in full screen movie.
9) OK or Enter or Select.
10) Back. Go back to previous page.
11) Volume UP / DOWN.
12) Info. Tells you what time the movie ends.

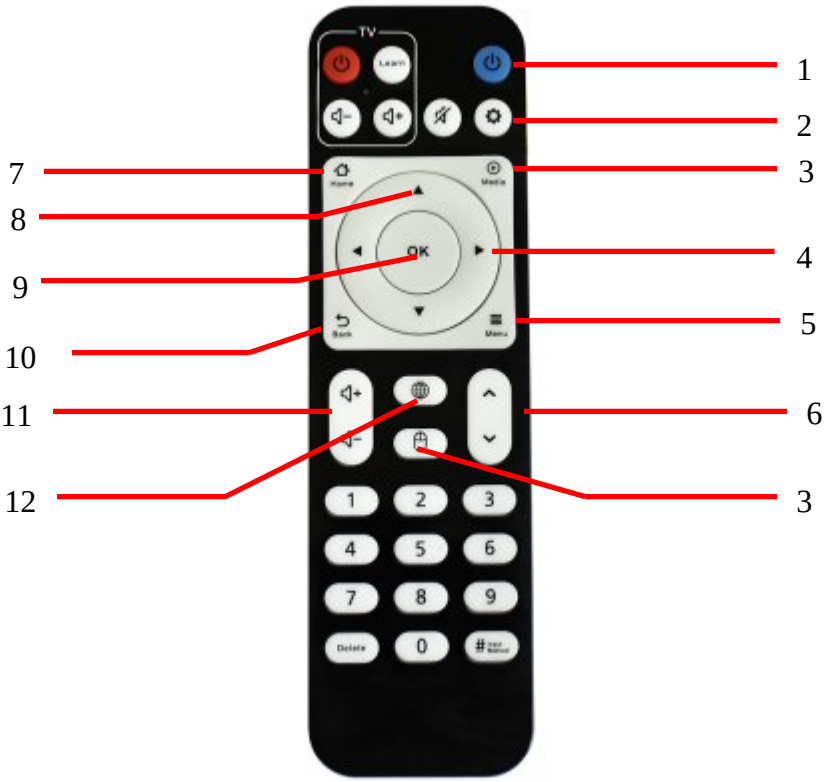

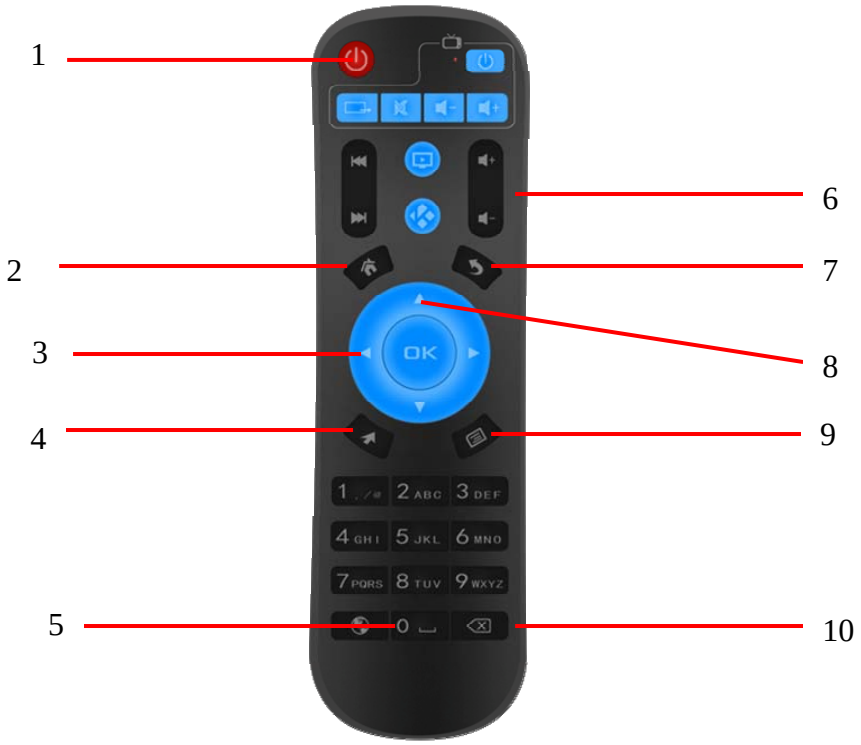

1. Power on/off
2. Home, Takes you back to the main page.
3. Left/Right arrows – FWD or REV video playback. During fullscreen video playback left and right arrows are 30 seconds.
4. Mouse (Don't forget to switch it off).
5. Super Favorites Menu – Used for Download feature during fullscreen playback and Super Search from anywhere.
6. Volume up/down
7. Back, Takes you back to the previous screen. Makes menu disappear.
8. Down and Up arrows – During fullscreen playback advances or rewinds 10 Mins
9. Menu/Context Key - The Menu key brings up a dialogue box to add items to library and no end of other features like playing trailers, etc.
10. Back Button – Goes back a page.

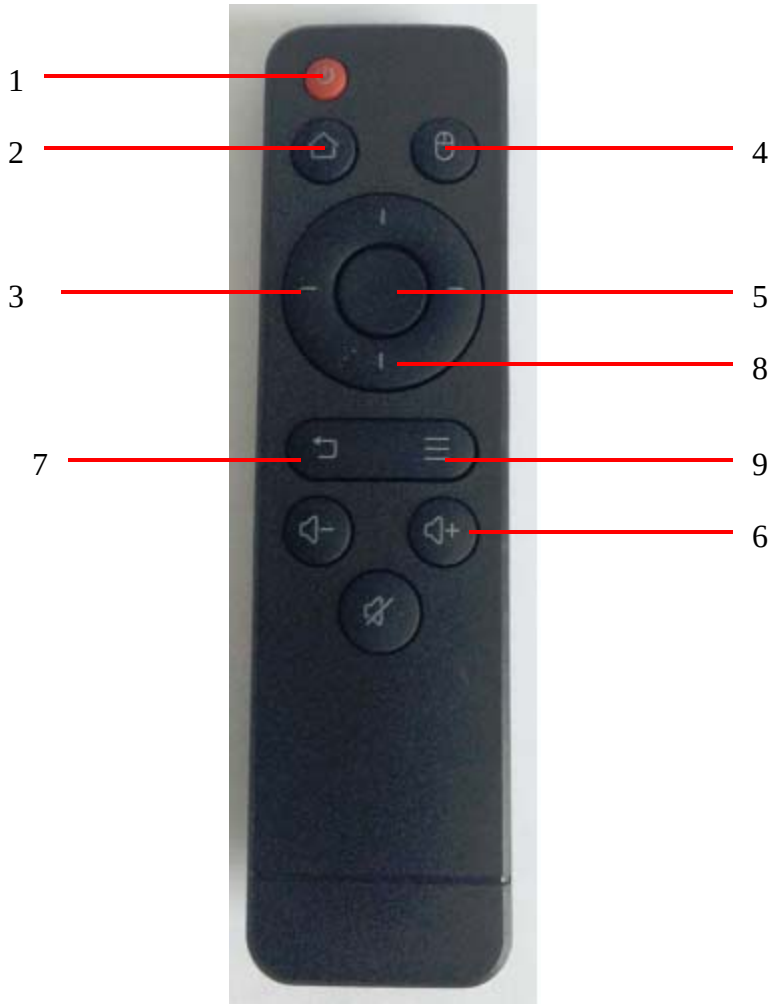

1. Power on/off
2. Home, Takes you back to the main page.
3. Left/Right arrows – FWD or REV video playback. During fullscreen video playback left and right arrows are 30 seconds.
4. Mouse (Don't forget to switch it off).
5. OKAY / Select.
6. Volume up/down
7. Back, Goes back a page. Takes you back to the previous screen. Makes menu disappear.
8. Down and Up arrows – During fullscreen playback advances or rewinds 10 Mins
9. Menu/Context Key - The Menu key brings up a dialogue box to add items to library and no end of other features like playing trailers, etc.

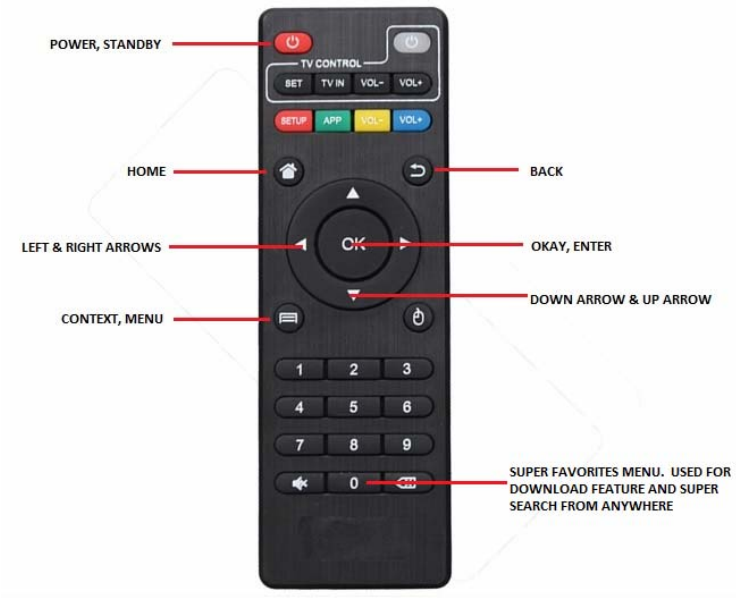

POWER - PUTS THE BOX ON STANDBY MODE.

HOME - TAKES YOU BACK TO THE MAIN PAGE.

LEFT & RIGHT ARROWS - FWD OR REV VIDEO PLAYBACK. DURING FULL SCREEN VIDEO PLAYBACK LEFT AND RIGHT ARROWS ARE 30 SECONDS.

BACK - GOES BACK TO THE PREVIOUS PAGE. MAKES A MENU DISAPPEAR.

OKAY, ENTER - SELECT KEY.

DOWN & UP ARROW - DURING FULL SCREEN PLAYBACK ADVANCES OR REWINDS 10 MINS.

CONTEXT, MENU -

THE MENU KEY BRINGS UP A DIALOGUE BOX TO ADD ITEMS TO FAVORITES AND LIBRARY UNDER THE VIDEO ADDONS SECTION. USED IN OTHER ADDONS TO BRING UP THE DIALOGUE BOX. SEE THE FOLLOWING LINK FOR A MORE DETAILED DESCRIPTION.

http://kodi.wiki/view/Basic_controls%23Contextual_menu